



Setup guide

Here is the quick setup guide showing you how to connect your modem.
Please check your home wall jack/ phone socket.

If your wall jack/ phone socket looks like the below diagram please follow the instructions from scenario A

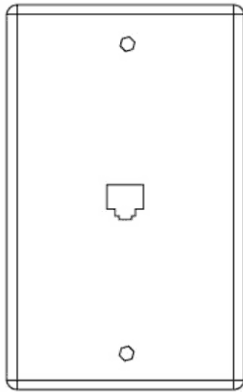


If your wall jack/ phone socket looks like the below diagram please follow the instructions from scenario B

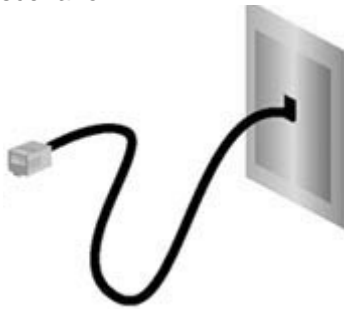


Scenario A


Step1 – From the Splitter, plug in the cable labelled “Line” to the house wall jack.

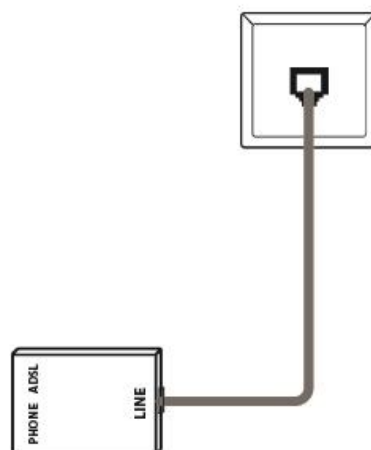


Step2 – Plug a telephone line into the port labelled “ADSL” on the Splitter and connect the other end of the telephone line to the “ADSL” port on the modem

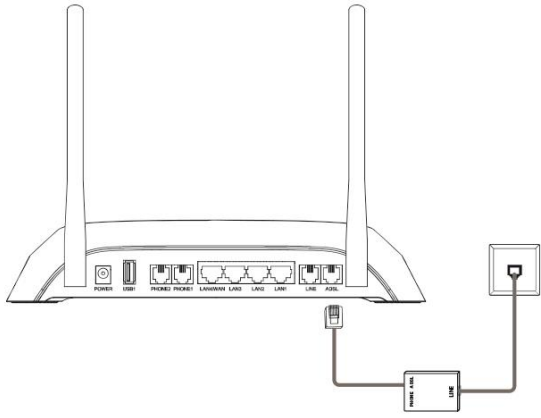


Step3 – Plug a telephone line into the port labelled “Phone” on the Splitter and connect the other end of the telephone line to the Telephone

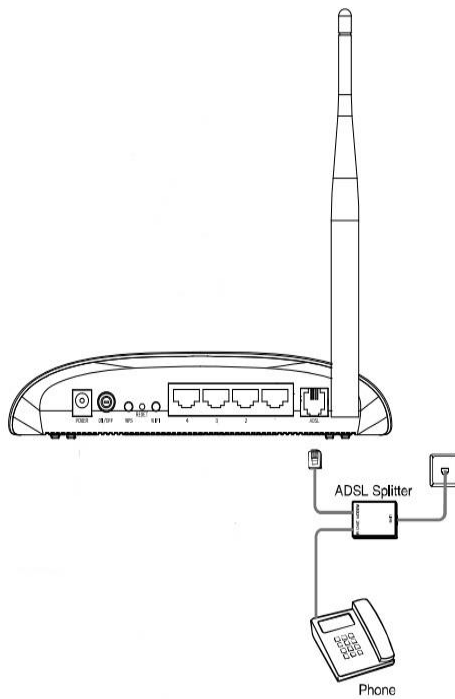

Step4 – Plug the Ethernet cable into the computer and connect the other end of the Ethernet cable to the a port on the modem labelled “LAN 1-4’

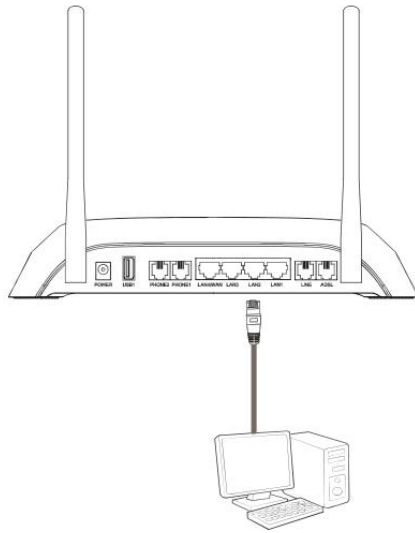

Step5- Plug the power adapter into the power jack at the back of the modem and connect to a standard electrical wall socket.

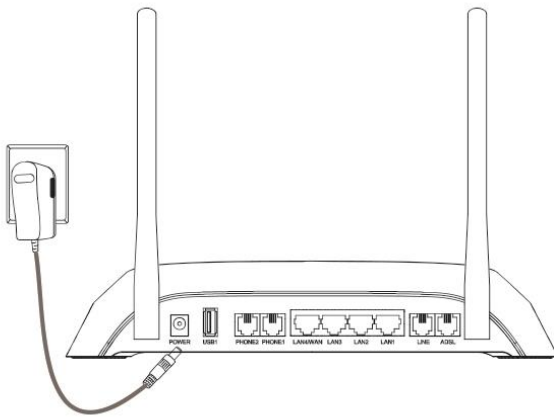


Step7 – Wi-Fi name and password are located on the modem.
If you are using WIFI to connect your computer, Click on network icon on your taskbar and select the Wi-Fi name provided on your modem. You will be prompted for a security key. Please enter the security key provided on your modem.




Scenario B


Step1 - Plug the telephone cable which came out from the wall jack into the Splitter port which is labelled "ADSL"

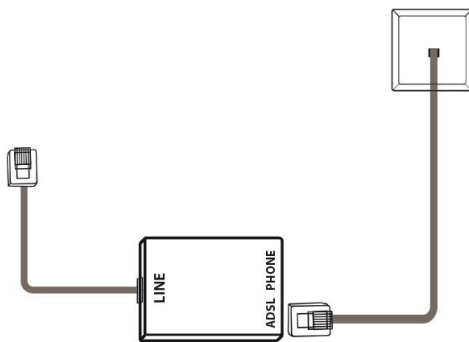

Step2- From the Splitter, plug in the cable labelled "Line" to "ADSL" port on the modem

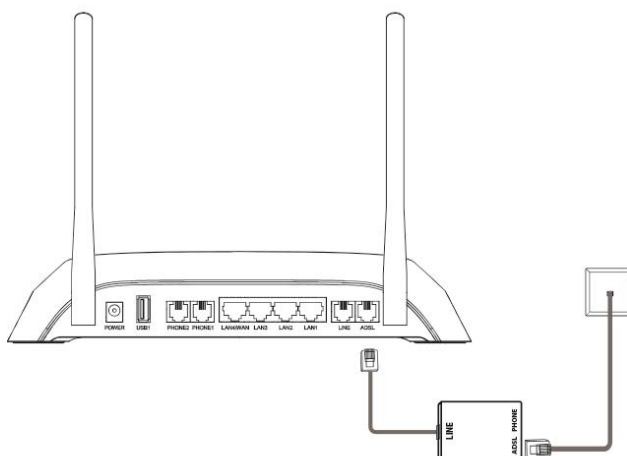

Step3 - Plug a telephone line into the port labelled "Phone" on the Splitter and connect the other end of the telephone line to the "LINE" port on the modem.

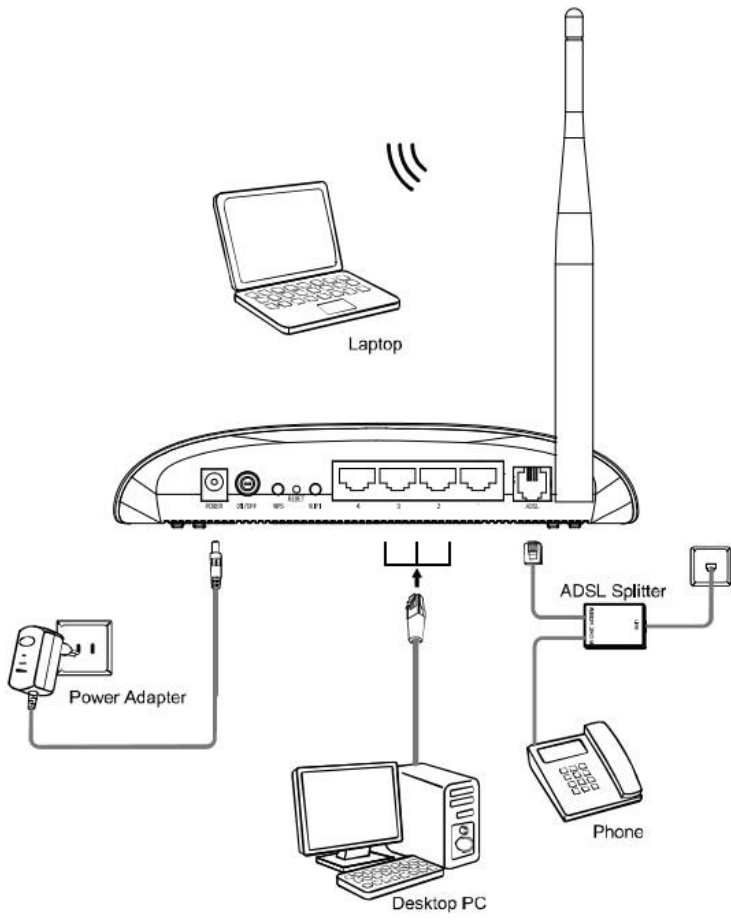

Please follow Scenario A steps 4 to step 7 to complete this setup.